

How to setup VPN Server?

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**

Application:

TOTOLINK routers provide PPTP protocol VPN connection which can connect many LANs (located in different places) into one through Internet and encryption.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering <http://192.168.1.1> into the address bar of your browser.




Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0.

If you can't log in, Please restore factory settings.

1-2. Please click **Setup Tool** icon  to enter the router's setting interface.




1-3. Please login to the Web Setup interface (the default user name and password is **admin**).

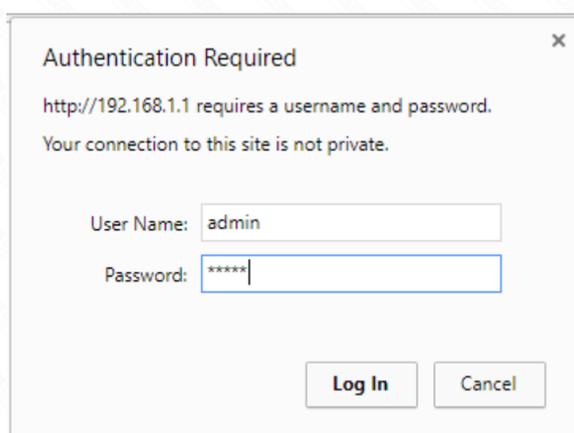

STEP-2:

Click **Advanced Setup->Utility->VPN Setup** on the navigation bar on the left.

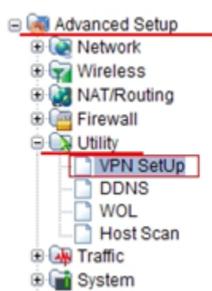


STEP-3:

Please choose start to connect the VPN server. Then click Apply button.


-- Mode: Start

-- Encryption (MPPE): MPPE encryption

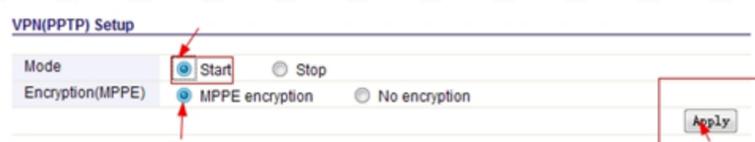

STEP-4:

4-1. Enter the account information about VPN account, and then click Add button.

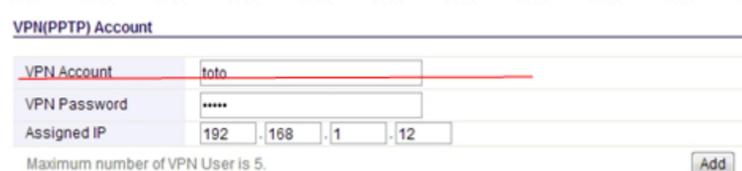

4-2. Next you will see there comes out the VPN information on the interface.

