

How to setup DHCP server protection for the router?

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**

Application:

The Remote Management feature allows you to manage the gateway from a remote location, via the Internet. You can use the gateway's Internet IP Address to enter the router's setting interface.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.1.1 into the address bar of your browser.




Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.

1-2. Please click **Setup Tool** icon  to enter the router's setting interface.




1-3. Please login to the Web Setup interface (the default user name and password is admin).

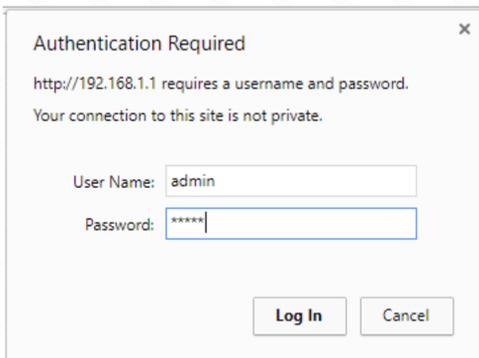

STEP-2:

Click **Advanced Setup->Firewall->Mgmt Access** Control on the navigation bar on the left.

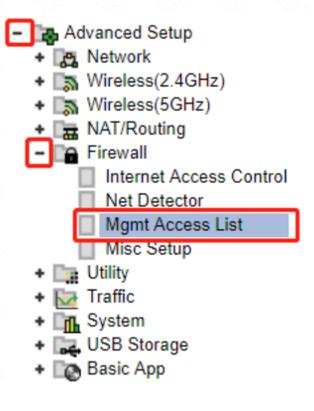


STEP-3:

Check the box to enable Remote Mgmt port and enter the desired port in the box (default port is 8080), and then click Apply button.



STEP-4:

Next to click Use Remote Accesslist and type in the IP allowed if you want to remotely manage by a specify IP address.

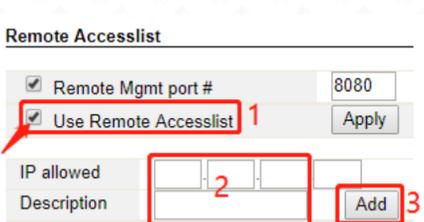

STEP-5:

After that you can enter the setup interface by **WAN IP+Remote Mgmt port**.

