

A3 Change the WIFI password setting

It is suitable for: **A3**

Application:

Solution about how to change the wireless name and password on the TOTOLINK products

STEP-1:

Connect your computer to the router by cable, enter http://192.168.0.1



Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


STEP-2:

User Name and Password are required, by default both are admin in lowercase letter. Meanwhile you should fill in the verification code .then Click Login.





STEP-3:

Then click the Advance setup bottom

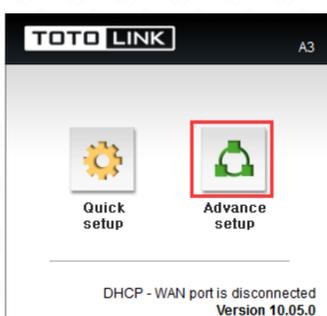

STEP-4:

Please go to **Wireless** page, and check which you have selected. then Click 2.4GHz Basic network. Select **WPAPSK/WPA2PSK+TKIP/AES**, then Input your own **Wireless Network Name and Password**, then Click **Apply**.

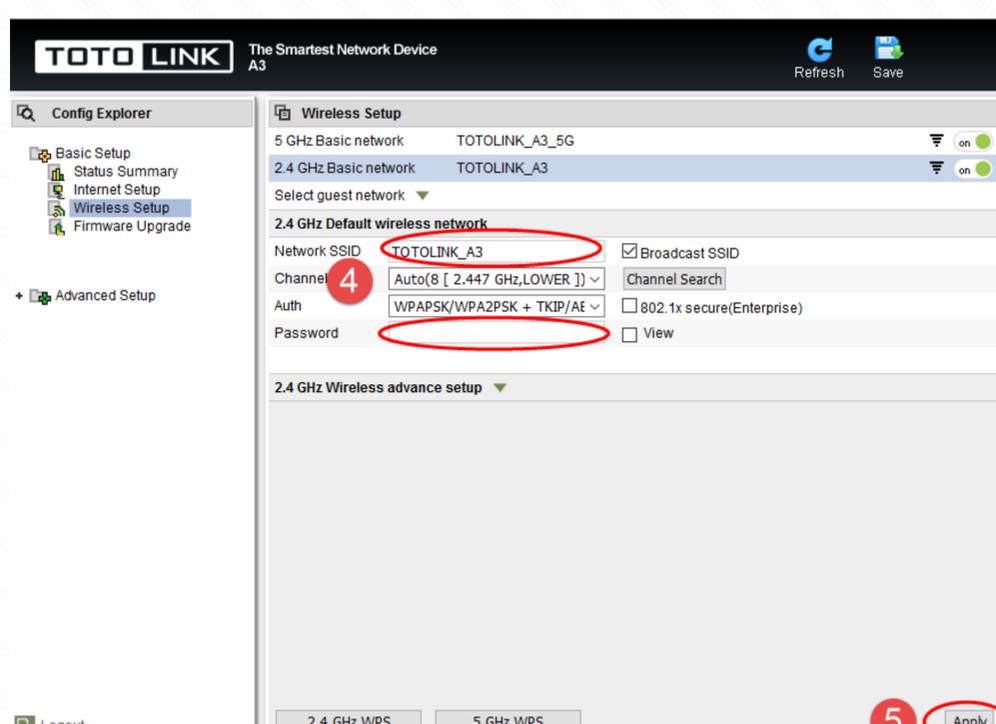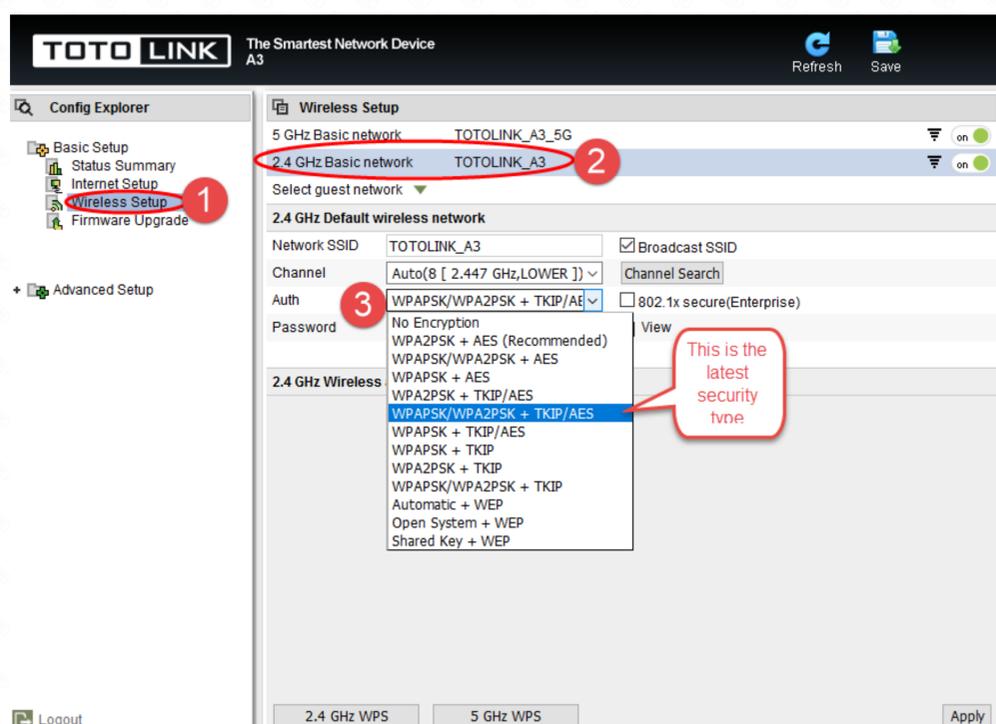

STEP-5:

Please go to **Wireless** page, and check which you have selected.then Click 5GHz Basic network. Select **WPAPSK/WPA2PSK+TKIP/AES**, then Input your own **Wireless Network Name** and Password, then Click **Apply**.

