

## A2004NS Samba server instal

### How to access A2004NS USB shared U disk video, pictures?

The operation of this document applies to the following models: **A2004NS, A5004NS, A6004NS**

#### Application:


A2004NS support file sharing function, the mobile storage devices (such as U disk, mobile hard disk, etc.) connected to the router's USB interface, LAN terminal equipment can access the resources of mobile storage devices, easy file sharing.

#### Diagram




#### Set up steps

##### STEP-1: Check if the hard disk has a successful access router

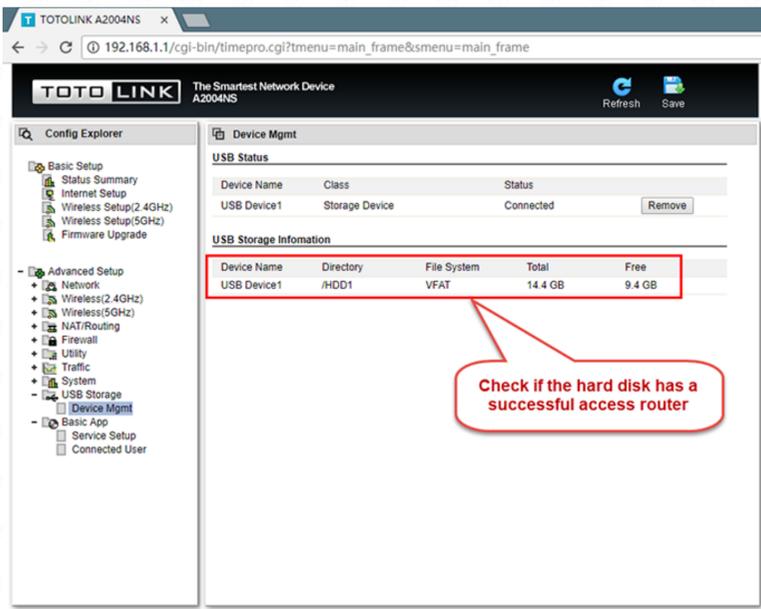


##### STEP-2: Samba server build

2-1. Go to the router interface and select **Basic App--Service Setup -- Windows File Sharing (SAMBA)**.

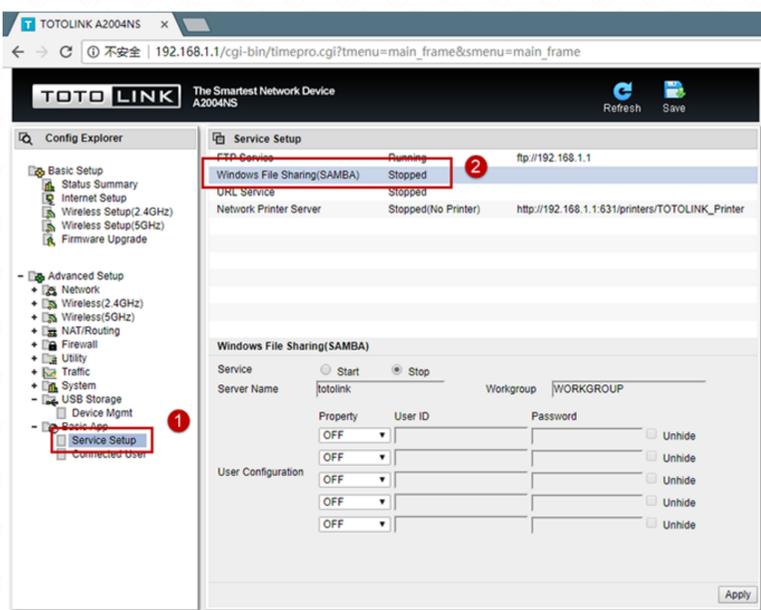


2-2. **Start** the server, select **Read / Write**, enter the **user ID** and **Password**. click **Apply**. The Samba server has been built.

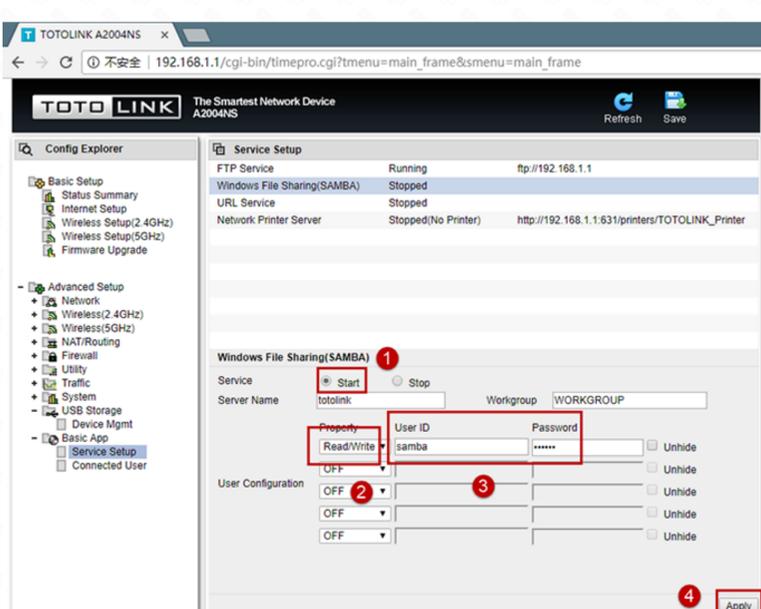


##### STEP-3: Access the FTP server from the client, and use the resources inside.

3-1. Open This PC and type **\\ 192.168.1.1** in the input box. And press the Enter key

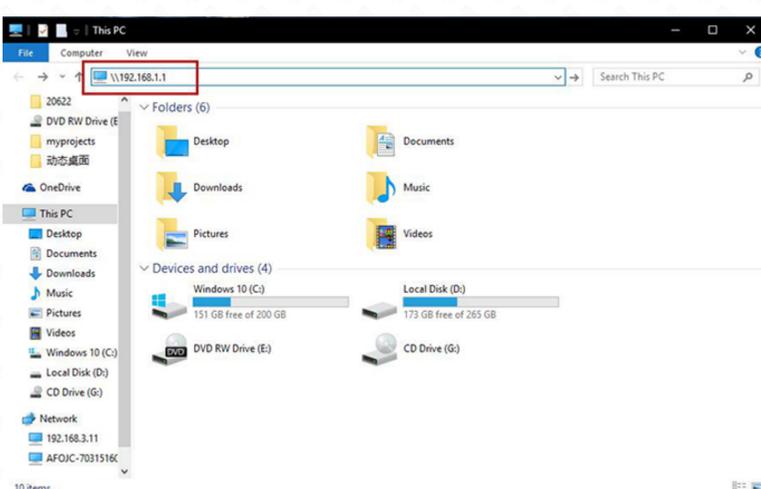

3-2. On this page, you will see the attached hard disk information. Click on this hard drive.

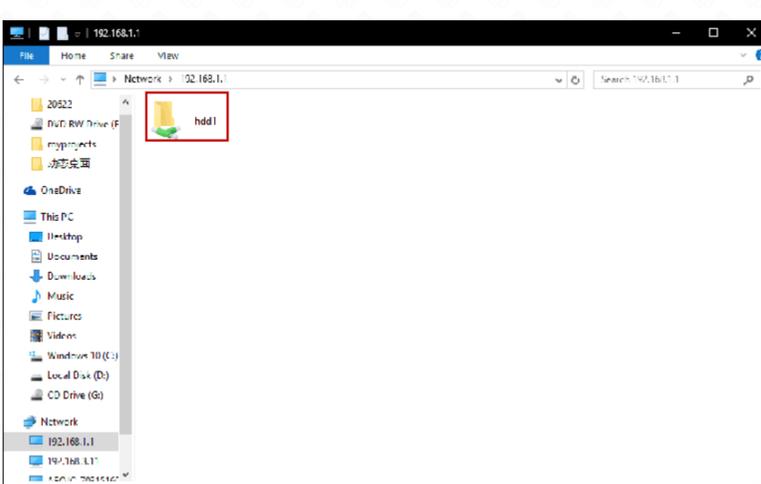

3-3. In this page will pop up a certification box, you need to enter the samba server set up, **user ID** and **Password**. At this point, you can good friends to share the resources inside the hard disk.

