

How to setup WOL function on the router?

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**

Application:

With WOL (Wake On Line) function, you can turn on a computer remotely. This document shows you the configuration of WOL on router.

Notice:

- Please confirm that your network card and system board support Wake ON LAN function at first.
- Before setup WOL, make sure you have opened the remote management function.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.1.1 into the address bar of your browser.




Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.


1-2. Please click Setup Tool icon  to enter the router's setting interface.




1-3. Please login to the Web Setup interface (the default user name and password is admin).

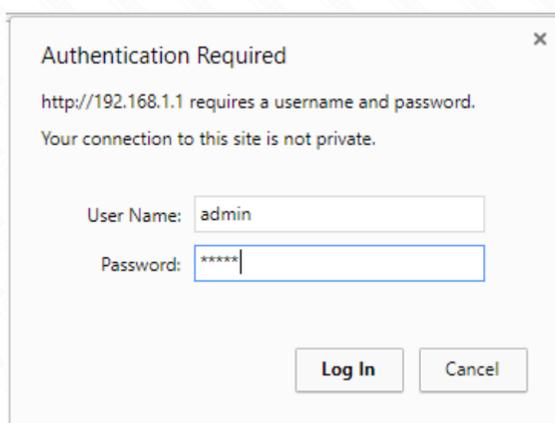

STEP-2: Click **Advanced Setup->Utility->WOL** on the navigation bar on the left.

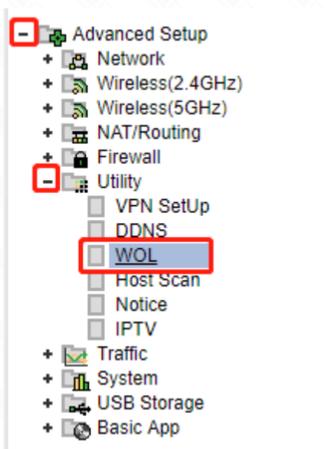

STEP-3: Click Search MAC address to find the MAC address of the PC.

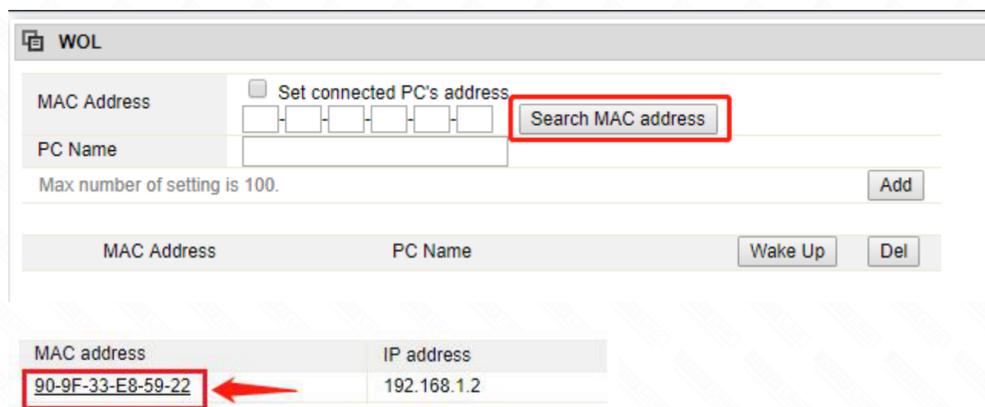

STEP-4: The MAC selected will appear on the column, check the box of .

