

How to configure port forwarding?

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**

Application:

By port forwarding, the data for Internet applications can pass through the firewall of the router or gateway. This article will show you how to forward ports on your router.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.1.1 into the address bar of your browser.




Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.

1-2. Please click **Setup Tool** icon  to enter the router's setting interface.




1-3. Please login to the Web Setup interface (the default user name and password is **admin**).

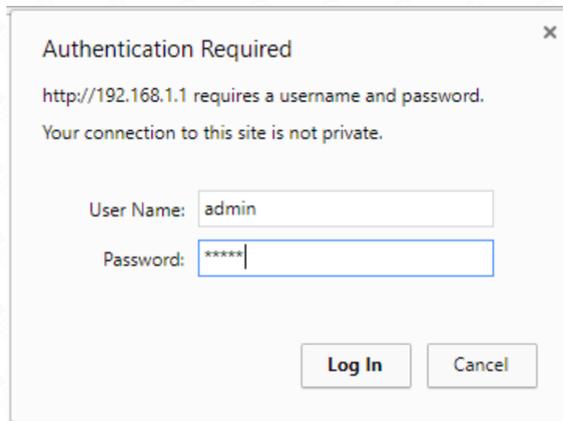

STEP-2:

Click **Advanced Setup->NAT/Routing->Port Forwarding** on the navigation bar on the left.

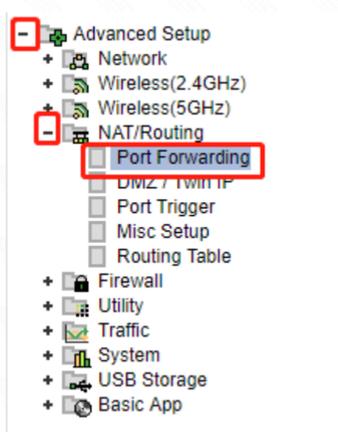

STEP-3:

Choose the Rule Type from the drop-down list, and then fill in the blank as below, and then click Add.



- **Rule Type:** User defined
- **Rule Name:** Set a name for rule (e.g. toto)
- **Protocol:** Selectable by TCP, UDP, TCP/ UDP
- **External Port:** open the external port
- **Internal Port:** open the internal port

STEP-4:

After last step, you can see the rule's information and manage it.

