

How to retrieve the password for wireless connection?

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**

Application:

Wi-Fi Protected Access (WPA) is the current most secure method of wireless security. You can set one encryption key for your wireless network to prevent occupied by others.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering <http://192.168.1.1> into the address bar of your browser.




Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.

1-2. Please click **Setup Tool** icon  to enter the router's setting interface.




1-3. Please login to the Web Setup interface (the default user name and password is **admin**).

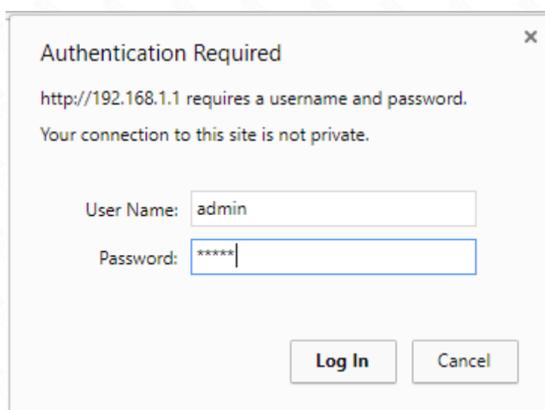


STEP-2:

Click **Advanced Setup->Wireless->Wireless Setup** on the navigation bar on the left .

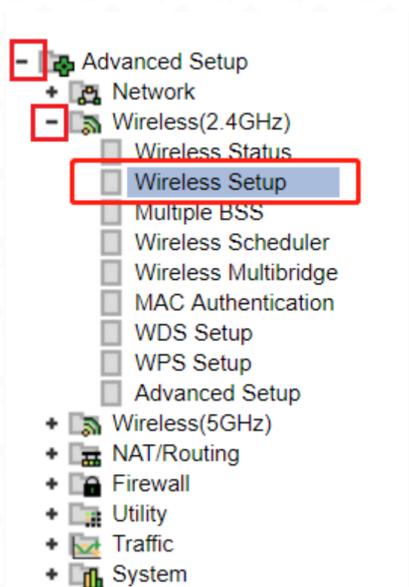

STEP-3:

3-1. Click the drop-down list to select **WPA-PSK/WPA2-PSK**.

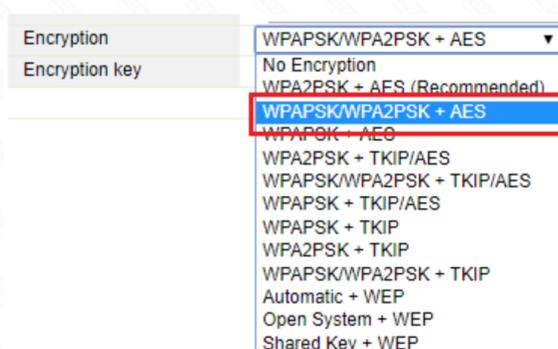

3-2. Next to type in Encryption key consist of 8 to 63 letters (a~ z) or numbers (0~ 9). wait for seconds.

