


# How to upgrade the firmware of the extender?

It is suitable for : **EX150, EX300**

1-1. Please login the extender's web-setting interface. (Default IP address: 192.168.1.254, User name: admin, Password: admin)



1-2. Click Firmware Upgrade on the config explorer.

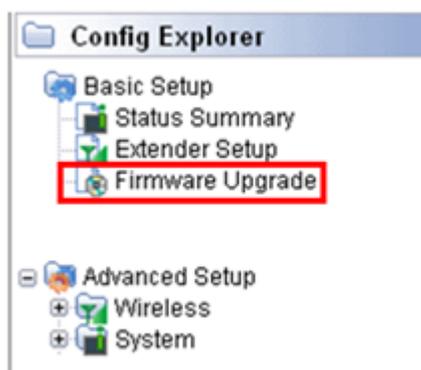

1-3. Click Choose File button to select the firmware version and then click Upgrade button.

