

How to set the wireless parameters of dual-band wireless router?

 
It is suitable for: **A1004, A2004NS, A5004NS, A6004NS**

Application:

If you want to set the wireless parameters of dual-band wireless router, please follow the steps below.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering <http://192.168.1.1> into the address bar of your browser.




Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

1-2. Please click Setup Tool  to enter the setup interface




1-3. Please login to the Web Setup interface (the default user name and password is admin).

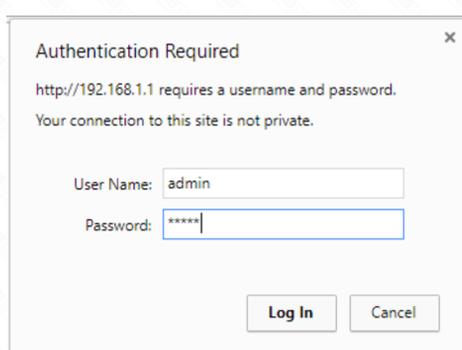


1-4. Now you can log in the interface to set up.

STEP-2: Parameters setting

2-1. Choose Advanced Setup->Wireless (2.4GHz)->Wireless Setup.

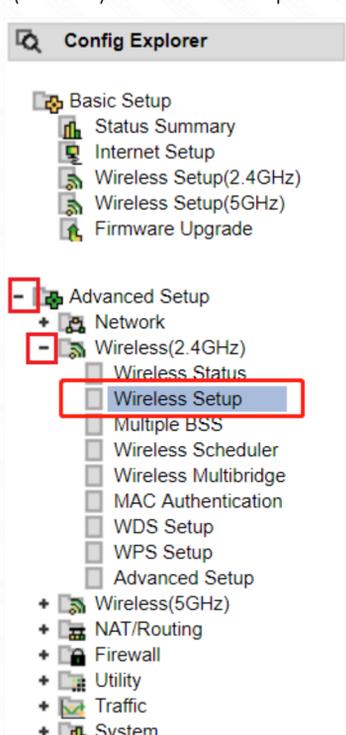


From the option, you can setup wireless parameters of 2.4GHz band

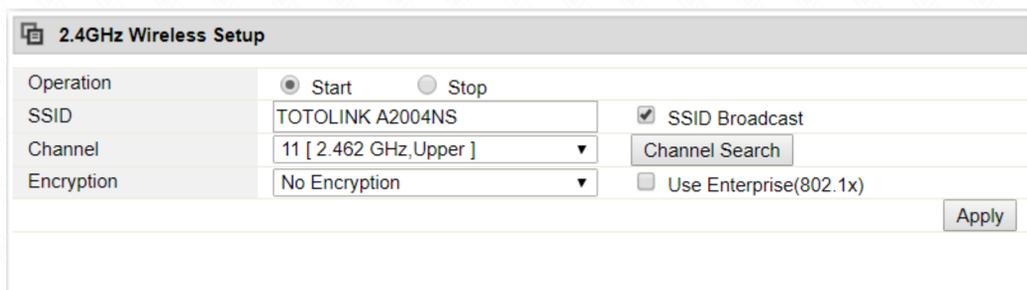

2-2. Choose Advanced Setup->Wireless(5GHz)->Wireless Setup.



From the option, you can setup wireless parameters of 5GHz band

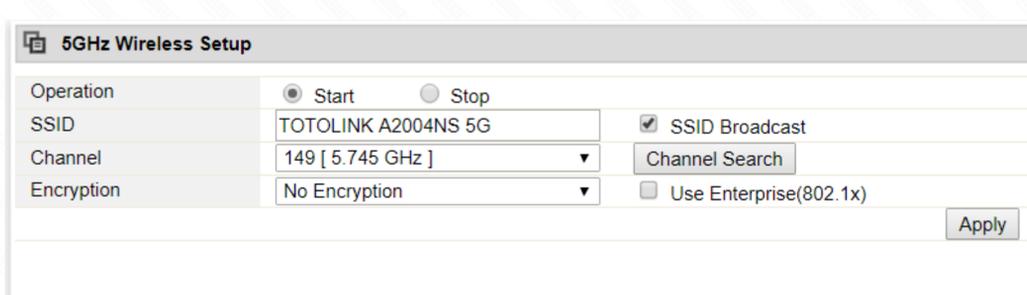

Note: You must select Start in the Operation bar firstly, after configuring the parameters, don't forget to click Apply.