

A3002RU repeater setting

It is suitable for : **A702R, A850, A3002RU**

Application introduction:

Solution about how to set repeater mode on TOTOLINK products.

Settings

STEP-1: Enter the setup interface

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

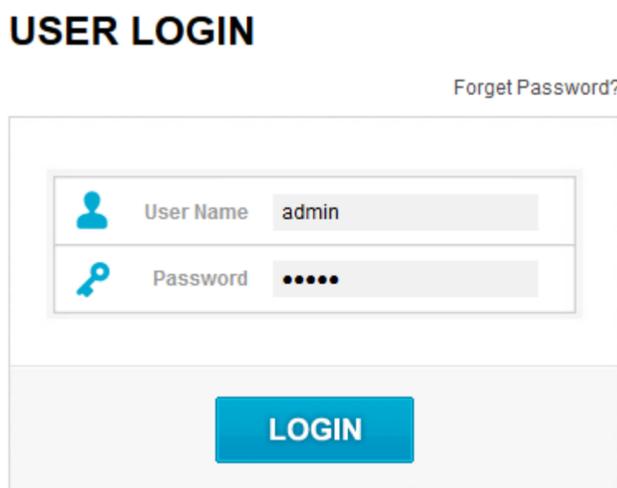


STEP-3:

Please go to **Operation Mode ->Repeater Mode->wlan 2.4GHz or wlan 5GHz** then Click **Apply**.

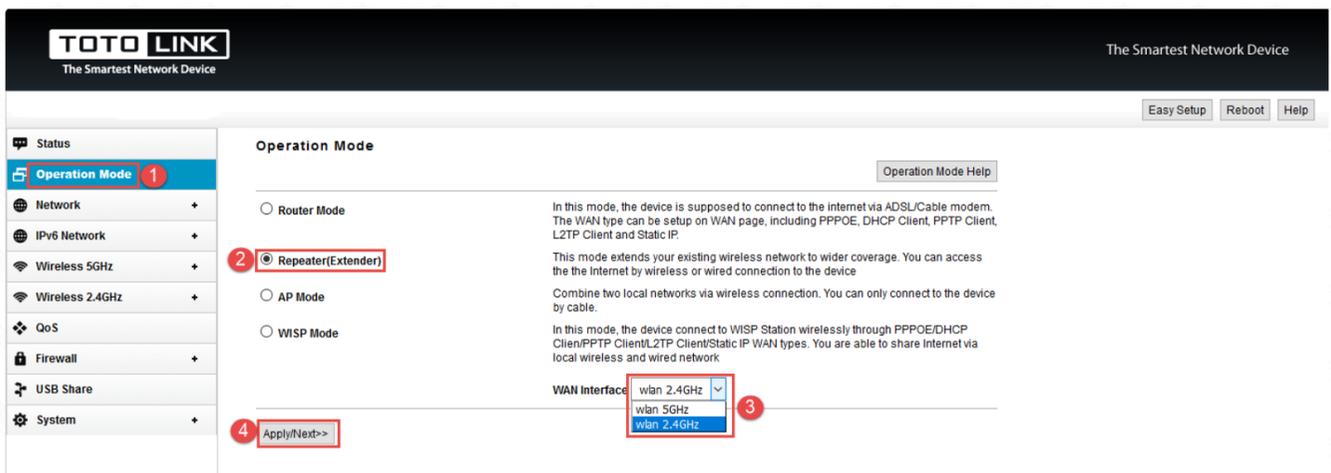


STEP-4:

Firstly select **Scan**, then select **host router's SSID** and input **Password** of the **host router's SSID**, then select **Change SSID and Password** to input SSID and Password you want to fill in, then Click **Next**.

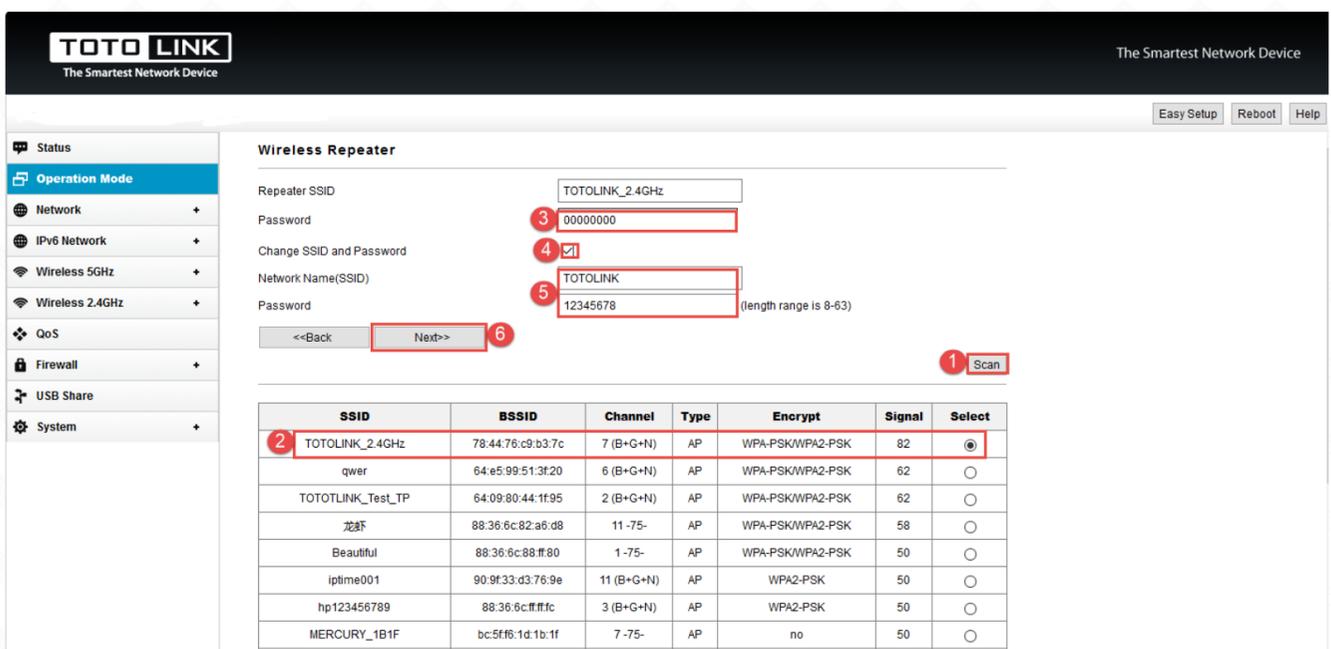

STEP-5:

Then you can change **Repeater SSID in 5GHz**. As below steps input **SSID and Password** you want to fill in to 5GHz, then Click **Connect**.

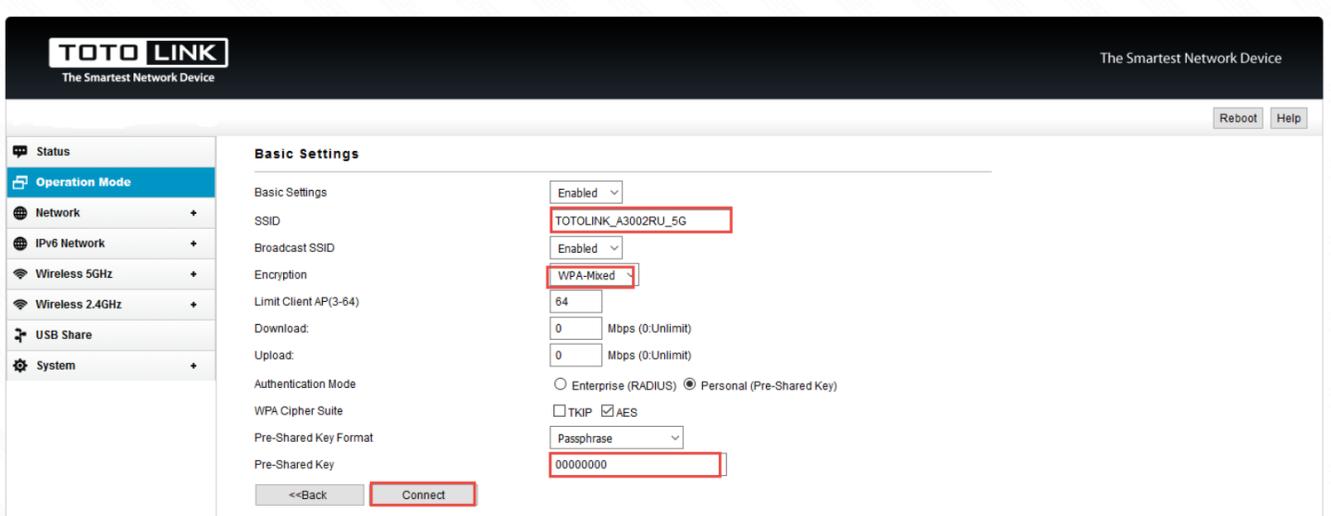

PS:

After completing the above operation, please re-connect your SSID after 1 minute or so. If the Internet is available it means that the settings are successful. Otherwise, please re-set the settings again.