

# How to log in to extender by manually configuring IP?

It is suitable for: **EX200, EX201, EX1200M, EX1200T**

## Set up steps


### STEP-1:

Connect to the extender's LAN port with a network cable from a computer network port (or to search for and connect the extender's wireless signal)

**Note:** The name of the wireless password after successful expansion is either the same as the upper level signal, or it is a custom modification of the extension process.

### STEP-2:


Extender LAN IP address is 192.168.0.254, please type in IP address 192.168.0.x ("x" range from 2 to 254), the Subnet Mask is 255.255.255.0 and Gateway is 192.168.0.254.

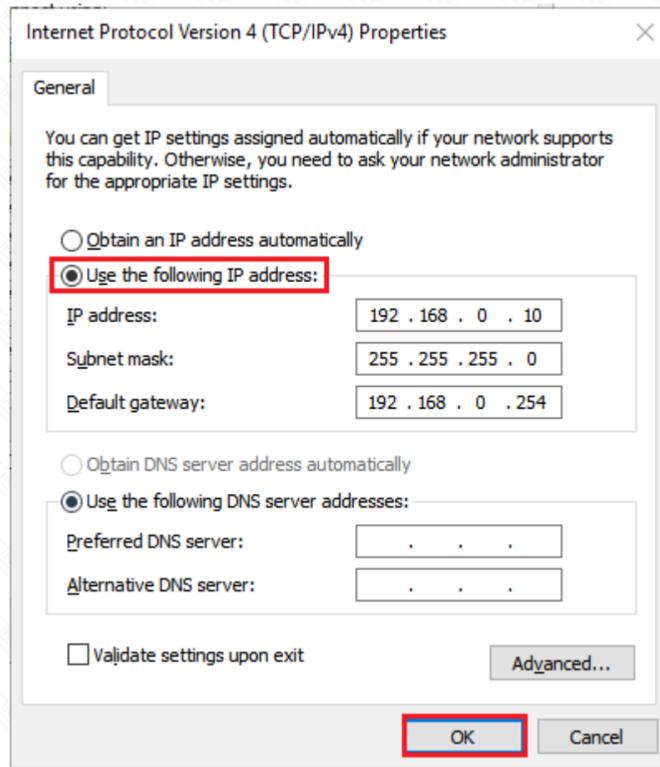

**Note:** How to manually assign an IP address, please click the FAQ# (How to manually set an IP address)


### STEP-3:

Open the browser, clear the address bar, enter 192.168.0.254 to the management page.

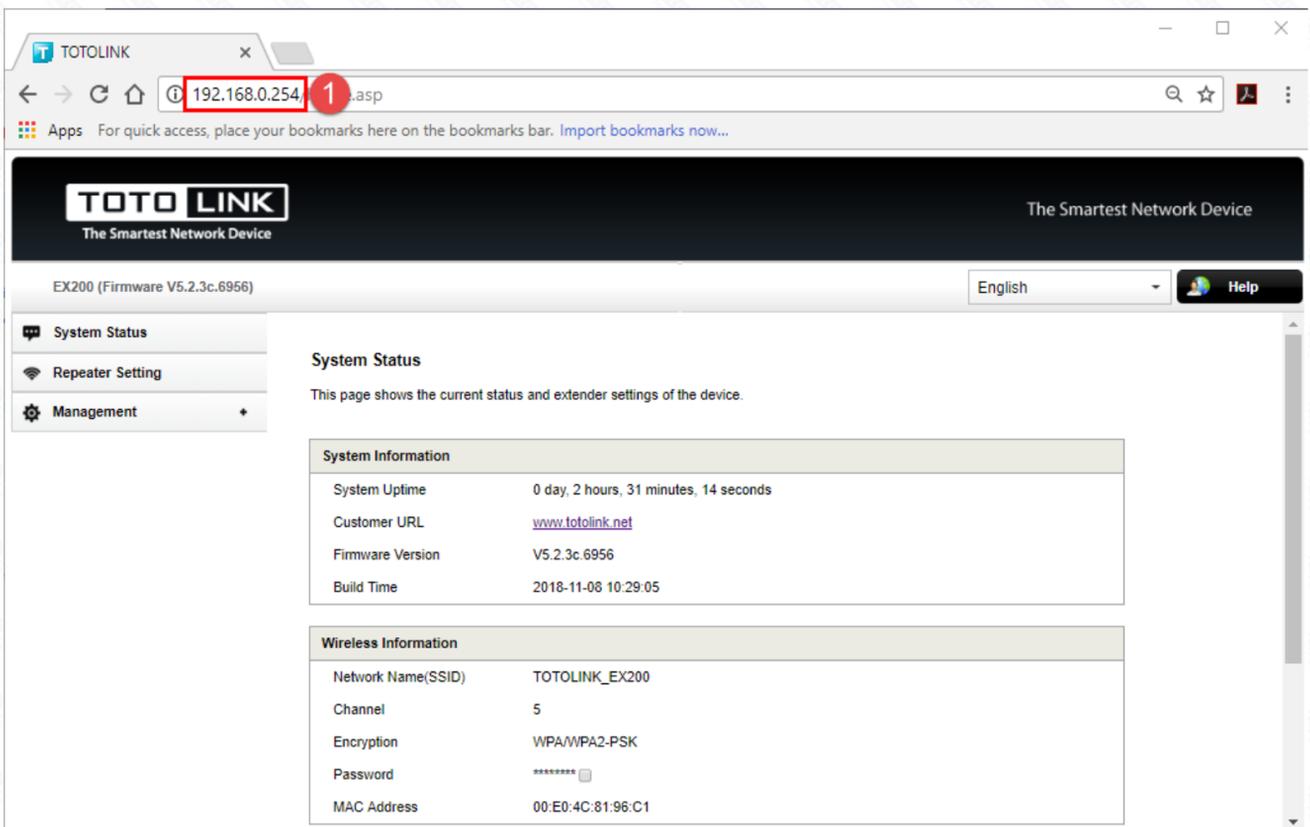

### STEP-4:

After the extender is successfully set up, please select Obtain an IP address automatically and Obtain DNS Server address automatically.

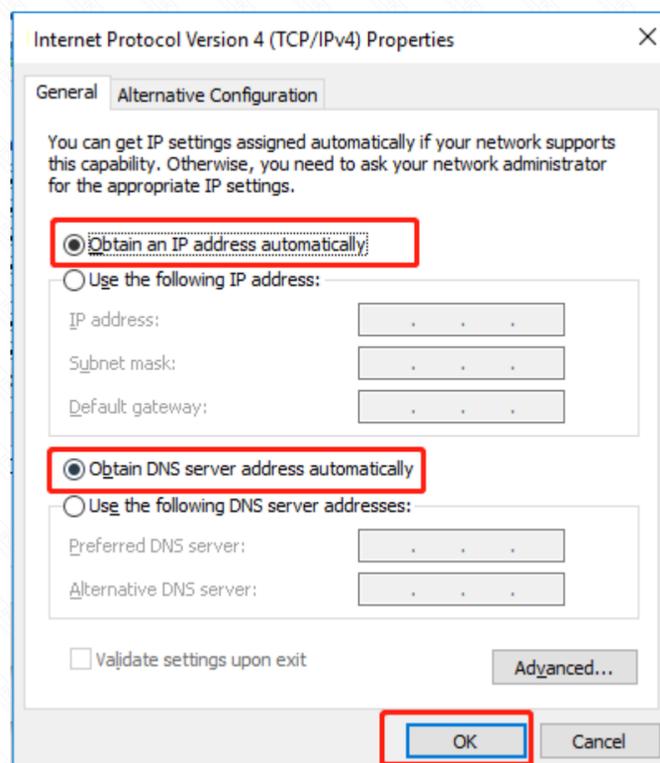

**Note:** Your terminal device must choose to obtain an IP address automatically to access the network.