

## How to set up static DHCP?

It is suitable for : **N100RE, N150RT , N200RE, N210RE, N300RT, N302R Plus, A3002RU**

### Set up steps

#### STEP-1: Connect your computer

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



*Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.*

#### STEP-2 :

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

### USER LOGIN

Forget Password?

User Name

Password

#### STEP-3 :

Enter advanced settings to select the LAN settings in Network, click the Set Static DHCP.

Model No. N100RE (Firmware V3.4.0)

- Status
- Network
- WAN Settings
- LAN Settings 1
- IPTV Settings
- DHCP&ARP Tables
- Static Route
- Routing Table
- Wireless
- QoS
- Firewall
- System

#### LAN Settings

Ip Address:

Subnet Mask:

DNS:

DHCP:

DHCP Client Range:  -

DHCP Lease Time:  (1 ~ 10080 minutes)

Static DHCP: Set Static DHCP 2

Domain Name:

802.1d Spanning Tree:

DHCP Clients List			
Host Name	Ip Address	MAC Address	Time Expired(s)
DESKTOP-7QF8A9F	192.168.0.2	60:02:b4:96:37:9d	28777

#### STEP-4 :

Checklist the Enable Comment. After click

Model No. N100RE (Firmware V3.4.0)

- Status
- Network
- WAN Settings
- LAN Settings
- IPTV Settings
- DHCP&ARP Tables
- Static Route
- Routing Table
- Wireless
- QoS
- Firewall
- System

#### Static DHCP Setup

Enable Static DHCP 1

IP Address:

MAC Address:

Comment:

Apply 3

IP Address	MAC Address	Comment	Select
192.168.0.10	14-da-e9-ed-ad-09	PC1	<input checked="" type="checkbox"/>