

How to set up static DHCP?

It is suitable for : **N300RH_V4, N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU, A7000R**

Set up steps

STEP-1: Connect your computer

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2 :

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)

STEP-3 :

Select advanced settings to enter the settings page

Easy Setup

The easy setup will guide you to configure AP for first time.

Advanced Setup

Connection Status

Connection Status DHCP **Disconnected**

Internet Setting

WAN Connection Type **DHCP**

5G Wireless

Network Name(SSID) **TOTOLINK_A810R_5G**
 Password
 The Password length should be between 8-63 bits

STEP-4 :

Enter the Static DHCP Setting to open the setting and checklist the Enable, input IP Address, MAC Address and Comment. After click Apply, we can see the information in the static DHCP List.

Static DHCP Setting

This page allows you reserve IP addresses, and assign the same IP address to the network device with the specified MAC address any time it requests an IP address. This is almost the same as when a device has a static IP address except that the device must still request an IP address from the DHCP server.

On/Off **Enable** (2)

Add a rule

IP Address **192 . 168 . 0 . 2** (3)

MAC Address **60 . 02 . B4 . 96 . 37 . 9D** (3)

(4)

Current Static DHCP List (The maximum entry count is 10)

ID	IP Address	MAC Address	Select